

Precautions: Do not fit in direct sunlight. Clean area thoroughly. Application temperature 7 - 24 C°


Tools needed: Squeegee, masking tape, cleaning solution (windolene / methylated spirits or similar NOT white spirit) & lint free cloth

1




Clean window surface where vinyl graphic is to be applied with windolene / methylated spirits (not white spirit) & a lint free cloth.

2

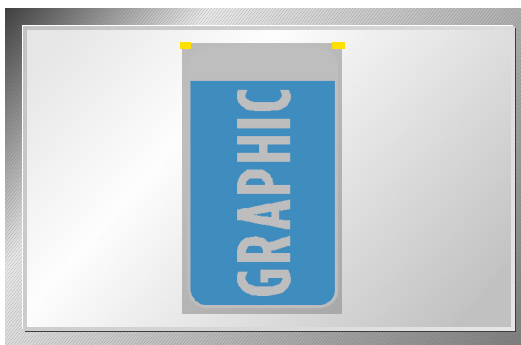


Position the graphic using 1" tabs of masking tape (top left & top right) to determine correct position & confirm graphic is level.

3

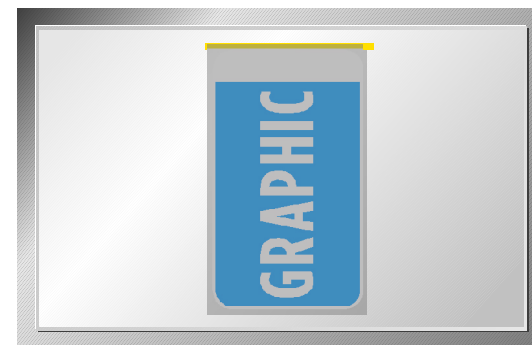


Once in position, run a strip of masking tape half on the graphic top & half on the glass, forming a masking tape hinge.

4

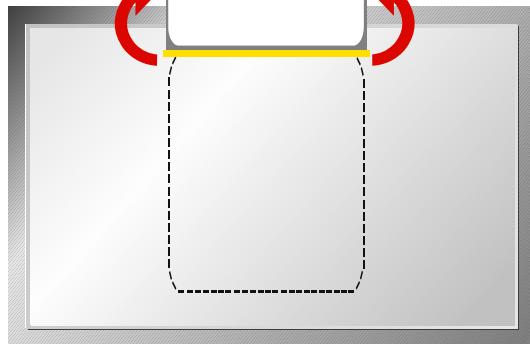


Lift the graphic up through 180 degrees flat to the surface and carefully peel back the backing paper about **6 inches**.

5

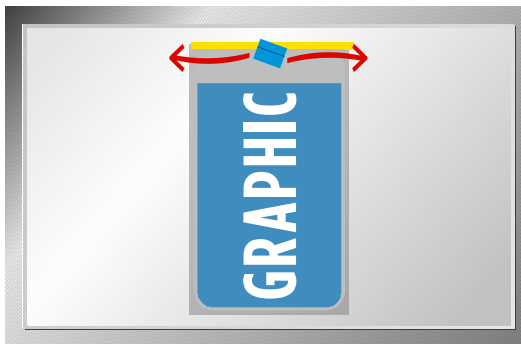

Maintaining tension in the graphic to prevent premature contact of the graphic top section to the glass, lower the graphic down (with one hand in the centre) so that the underside is just above the surface of the glass. With the blue squeegee supplied in the other hand, apply the graphic to the glass using firm, smooth, overlapping strokes from the centre line to the left & right edges (as shown). Repeat **Steps 4 & 5** until graphic is completely fitted.

6

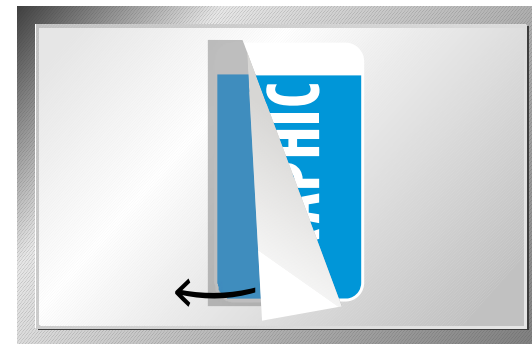

Finally remove masking tape hinge and carefully peel back the application tape 180 degrees from the graphic. Prick any small bubbles with a pin if present.

