


FITTING INSTRUCTIONS

Graphics NOT Taped


PLEASE USE **FELT SIDE OF SQUEEGEE**

Precautions: Do not fit in direct sunlight. Clean area thoroughly. Application temperature 7°C - 24°C.


Tools needed: Squeegee, masking tape, cleaning solution (windolene / methylated spirits or similar NOT white spirit) & lint free cloth

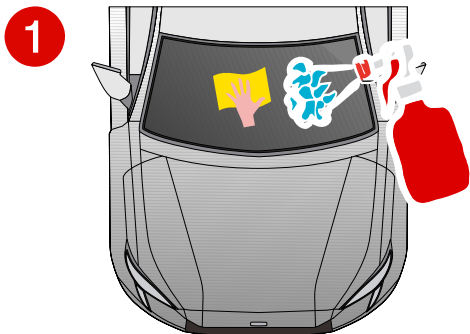


Clean surface where vinyl graphic is to be applied with windolene / methylated spirits (not white spirit) & a lint free cloth.

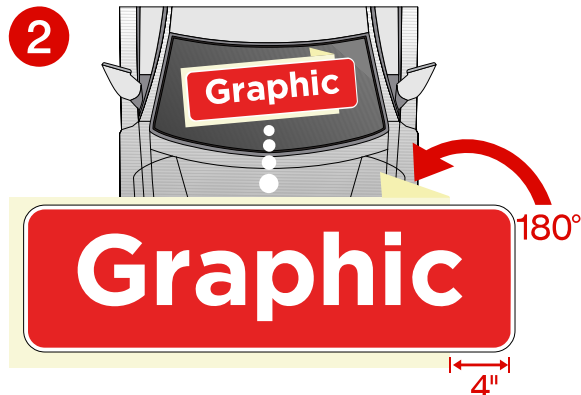

Carefully peel back 4 inches of the backing paper at one end, 180 degrees from the graphic and put a fold in backing paper.

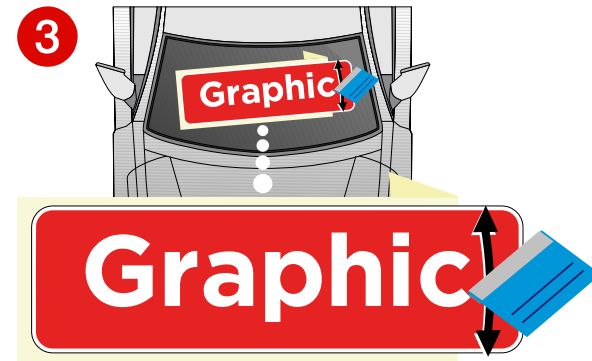


Using the squeegee, apply the 4 inches of exposed graphic to the cleaned surface at one end to create a hinge.

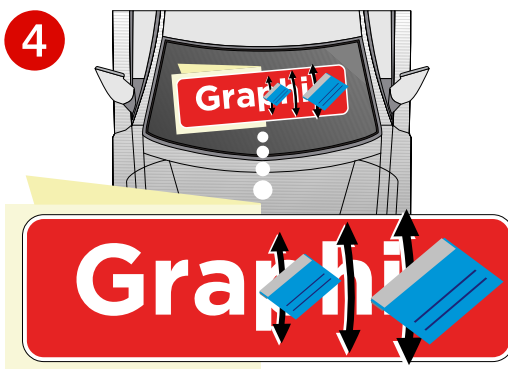


Remove the backing paper to the half way point of the graphic while keeping the graphic from touching the surface.

With the squeegee at 90 degrees to the surface, start applying 4 inches of the graphic at a time until you reach the half way point.

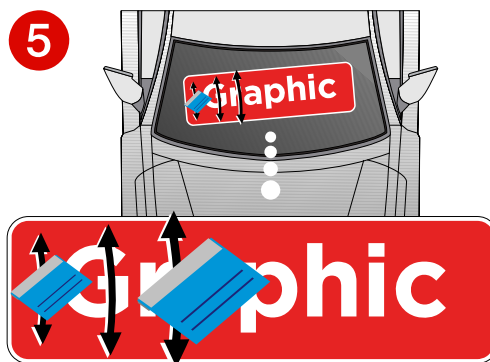

Remove the remainder of the backing paper and continue applying 4 inches of the graphic at a time until you reach the end of the graphic.

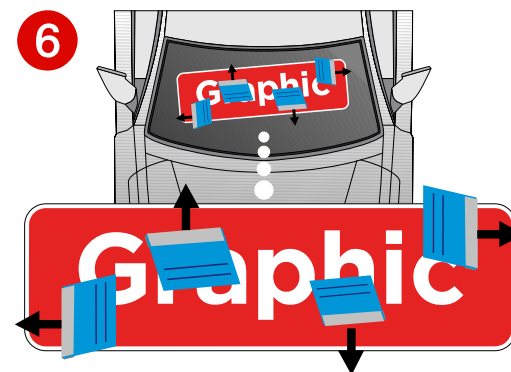

If necessary, smooth down any areas around the edge of the graphic with the squeegee in a vertical plane as shown. Prick any small bubbles with a pin if present.

CHECK OUT OUR FITTING VIDEOS

SCAN
HERE

REMOVAL OF GRAPHICS

DISCOUNT VEHICLE LETTERING COMPANY
Unit 3 & 4, Glover Network Centre, Spire Road, Washington NE37 3HB

To remove graphics, simply lift edge with fingernail and slowly peel off. **There is no need to use a hot air gun or pressure wash gun as this method will only leave large amounts of adhesive residue.** If there is any adhesive residue remaining, remove using proprietary 'glue and tar' remover solvent.

tel: 0191 416 8844

fax: 0191 416 8833

email: mail@gotodvlc.co.ukweb: www.gotodvlc.co.uk